

BOXES

Disconnect Boxes

| NI Part # | Description |
|-----------|--|
| 465081 | 30 Amp Fusible w/ 60 Amp Enclosure |
| 465091 | 30 Amp Non-Fusible w/ 60 Amp Enclosure |
| 465111 | 60 Amp Fusible |
| 465131 | 60 Amp Non-Fusible |
| 465141 | 100 Amp Fusible |
| 465151 | 100 Amp Non-Fusible |
| 465161 | 200 Amp Fusible |
| 465171 | 200 Amp Non-Fusible |



*Disconnect Box
465081*



Junction Boxes

| NI Part # | Description |
|-----------|----------------------|
| 46505 | 100 Amp Junction Box |
| 46506 | 200 Amp Junction Box |



*Junction Box
46505*



Hubs

| NI Part Number | | Description |
|----------------------|--------------------|-------------|
| For Disconnect Boxes | For Junction Boxes | |
| 390581 | 39068 | 1" Hub |
| 390551 | 39069 | 1-1/4" Hub |
| 390591 | 39070 | 1-1/2" Hub |
| 390661 | 39071 | 2" Hub |



*Hub for Junction Box
39068.*

Hubs for disconnect boxes are similar.

D